



Račva T tip RC400

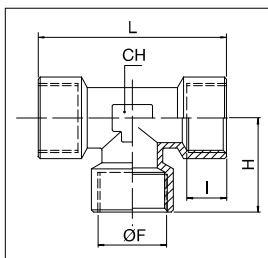


Model	Lager	F	I	H	L	CH
RC400-M5		M5	5	11	22	9
RC400-1/8	✓	G1/8	8	21	42	10
RC400-1/4	✓	G1/4	11	25.5	51	13
RC400-3/8	✓	G3/8	11.5	28	56	17
RC400-1/2	✓	G1/2	15	33.5	67	21
RC400-3/4		G3/4	16.5	36.5	73	25
RC400-1		G1	19	45	90	30

Priključak L spojni tip RC510

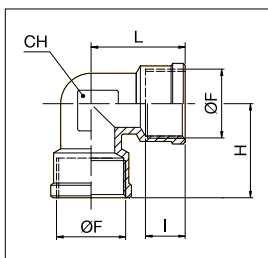


Model	Lager	F	I	H	L	CH
RC510-1/8	✓	G1/8	8	18.5	18.5	10
RC510-1/4	✓	G1/4	11	22.5	22.5	12
RC510-3/8	✓	G3/8	11.5	25.5	25.5	15
RC510-1/2	✓	G1/2	14.5	30	30	19
RC510-3/4		G3/4	16.5	35.5	35.5	22
RC510-1		G1	18	40.5	40.5	28

Prigušnik buke AZ-SE

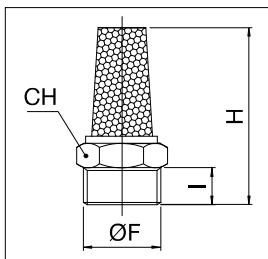


Model	Lager	F	I	H	CH
3733-M5	✓	M5	3.5	17	7
3733-G1/8	✓	G1/8	4.5	21	12
3733-G1/4	✓	G1/4	6	27	15
3733-G3/8	✓	G3/8	7	35	19
3733-G1/2	✓	G1/2	8	41.5	23
3733-G3/4	✓	G3/4	9	54	30
3733-G1	✓	G1	11	66	36

Prigušnik buke podesivi RSW

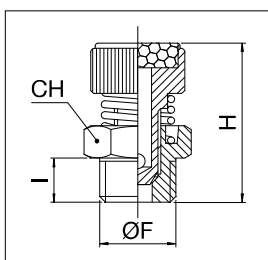

Model	Lager	F	I	H min	H max	CH
RSW 1/8	✓	G1/8	6	26	28	13
RSW 1/4	✓	G1/4	8	30	32	15
RSW 3/8	✓	G3/8	9	35	38	18
RSW 1/2	✓	G1/2	10	36	39	22

Prigušnik buke AZ-SEP

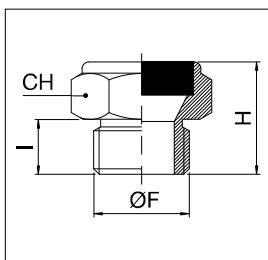

Model	Lager	F	I	H	CH
AZ-SEP2 G1/8	✓	G1/8	6	13	13
AZ-SEP3 G1/4	✓	G1/4	8	16	16
AZ-SEP4 G3/8	✓	G3/8	9	18	19
AZ-SEP5 G1/2	✓	G1/2	10	18	24